


CONNECTING PIPE INSTALLATION INSTRUCTIONS

The connecting pipe is installed in a place specified in the HVAC plan or in the instructions provided by Oulun Energia. Installation must follow the measurements and instructions in the picture below. Further information can be obtained from Oulun Energia's district heating.

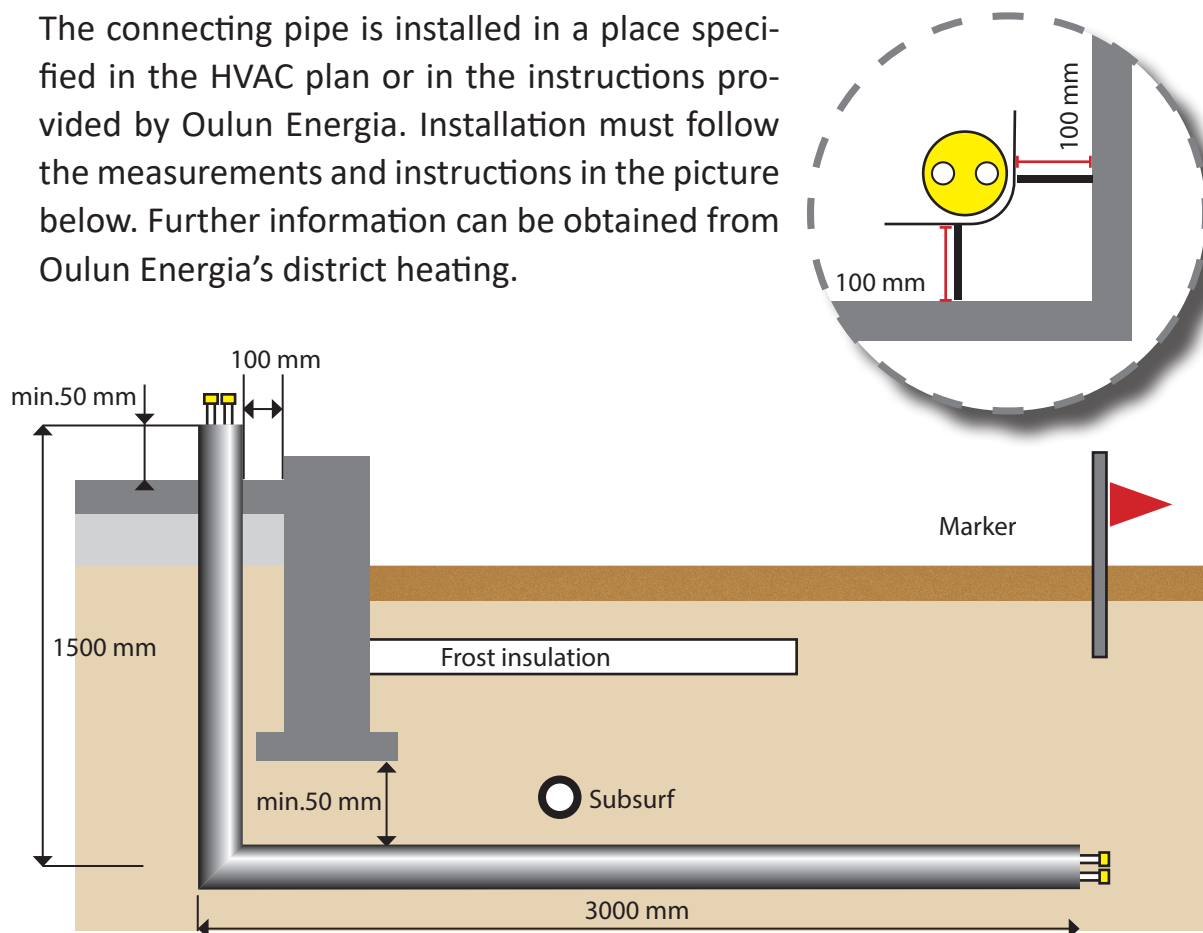

Outside the house, there must be half a metre of work space at the end of the connecting pipe for welding and special work. Subsurface drains, rain pipes and electrical cables must not be installed in the vicinity of the end of the pipe. The plastic protective cover of the vertical section of the connecting pipe must reach above the final floor casting by about 5–10 cm.

After installation of the connecting pipe, it is covered with rock-free sand. The end of the connecting pipe should be marked (for example, with a piece of plank), so that it can easily be found in case of any future excavation work. The customer must ensure that the protective plugs at the ends of the steel connecting pipes remain in place during installation.

Oulun Energia has the right to charge possible additional costs caused by connecting pipe installation errors.